HOME DECORATORS Collection®

INDUSTRIAL EMPIRE BENCH

Assembly Instructions

HDC#:0823100910 MFG#:OME-55006

Please read over the instructions; it will be a time-saver in the long run.

Note: Before Assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.

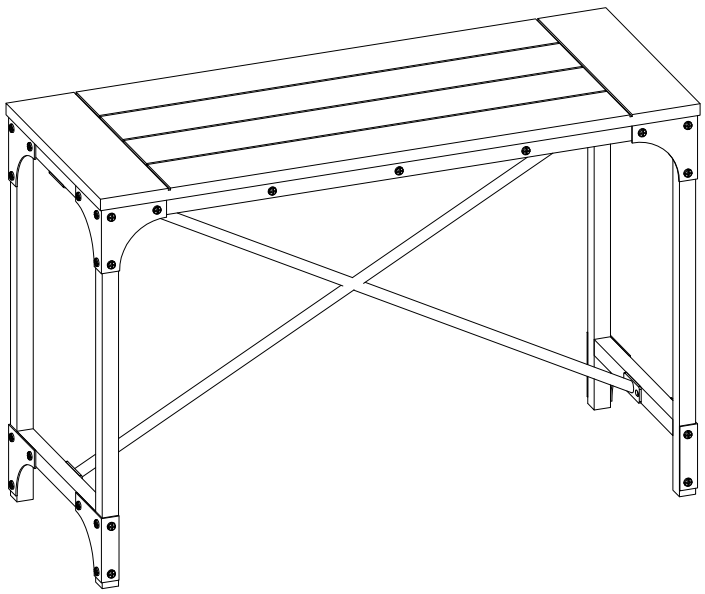

Parts Check List

Please remove all the parts carefully from the box. Thoroughly clean all parts surfaces to remove dust and dirt that may have settled onto the finish.

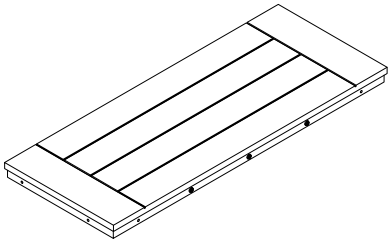

① Top panel - 1 PC



② Right leg - 2 PCS



③ Left leg -2PCS

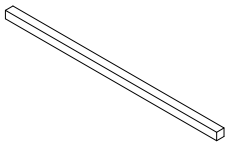

④ Connecting bar - 2 PCS



⑤ Cross connecting bar - 2 PCS

Hardware Check List

Please take all hardwares out of the hardware bag.

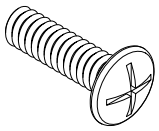

A. Screw - 12 PCS
5/16"× 5/8"



B. Allen bolt - 8 PCS
1/4"× 5/8"

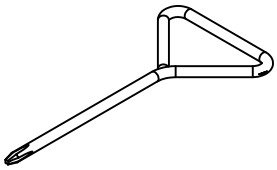

C. Screw driver - 1 PC
ϕ5× 108



D. Allen wrench - 1 PC
M 4

Do not tighten screws until completely assembled!!

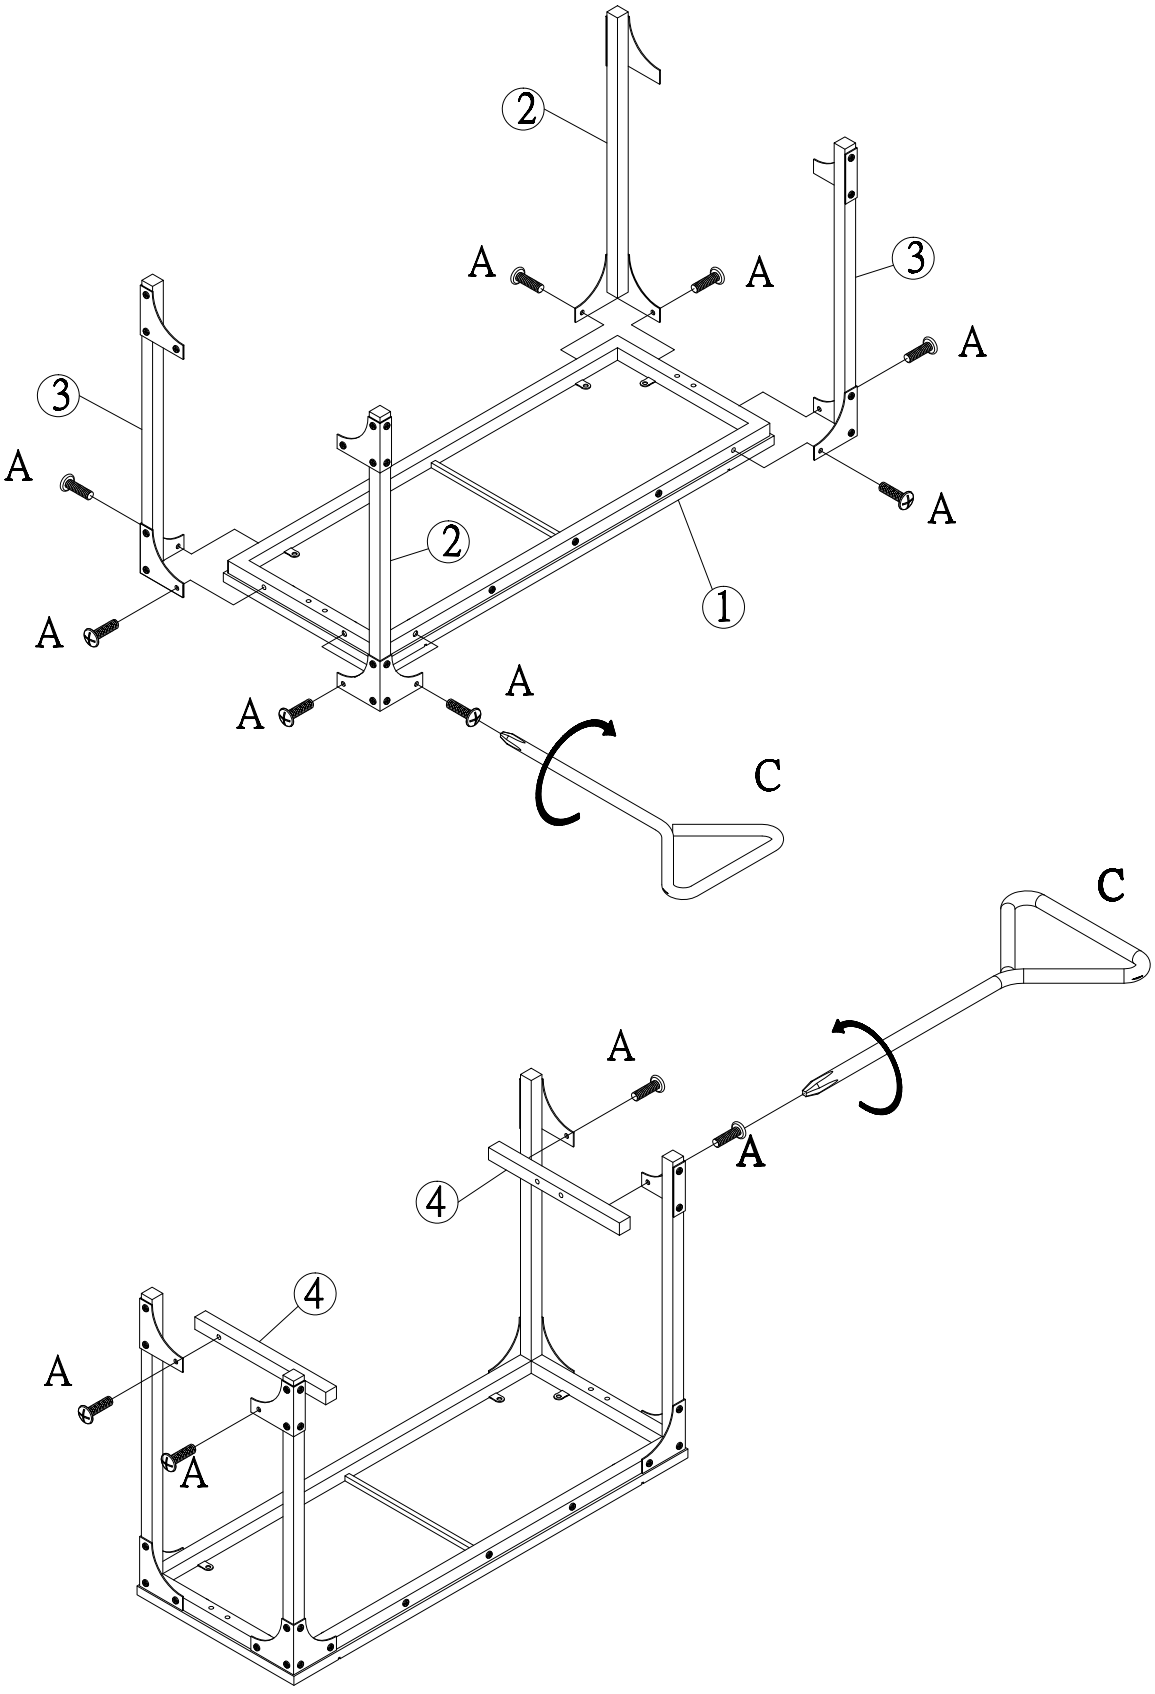

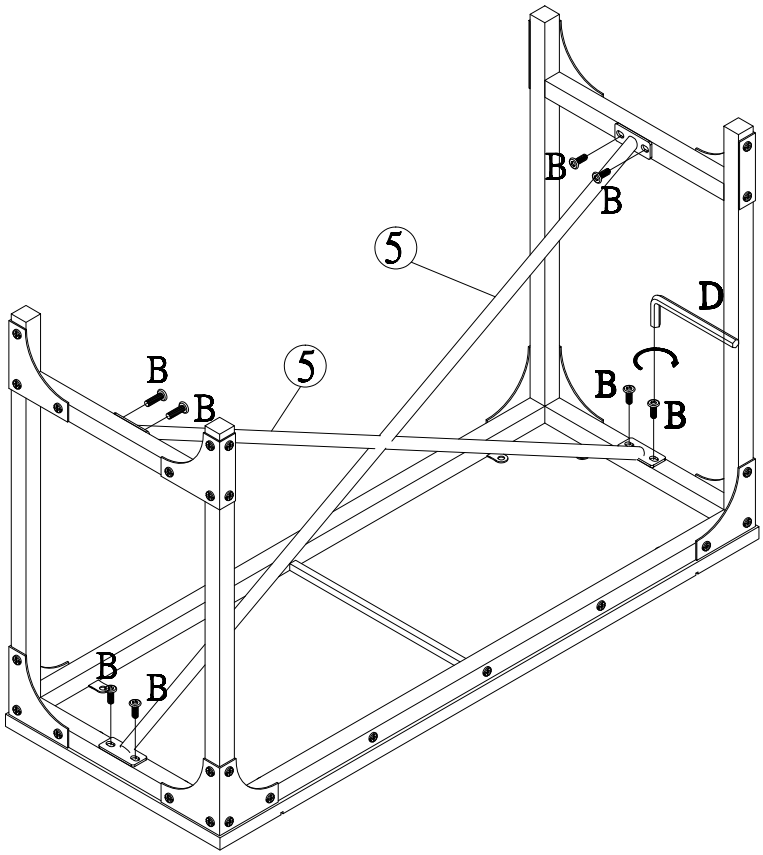

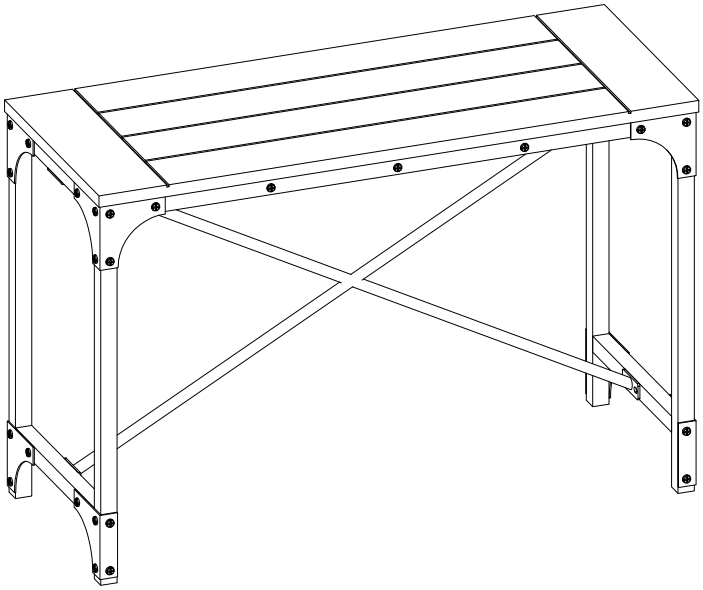

Assembly is completed!